

Electric Stove

[EN] User Manuel

Kun1001-1 / Kun1001-2

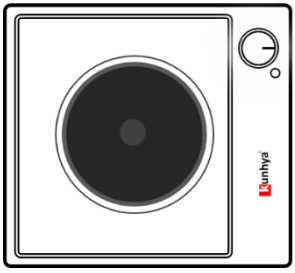

Kun1002-1 / Kun1002-2

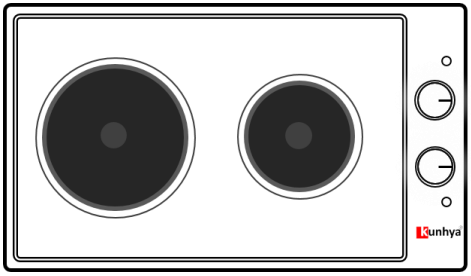

This appliance has been manufactured in accordance with European Union directives and **CE** Quality Approval Certificates.

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

THE SERVICE LIFE OF THIS PRODUCT IS 10 YEARS.

GENERAL INFORMATION

Information About the Operating Instructions

These operating instructions are designed to ensure the proper and safe use of the appliance. For your own safety and the safety of others, please read the user manual carefully before operating the product. Keep this manual in a safe place for future reference.

Disclaimer & Liability



Kunhya Dayanıklı Tüketim Malları Sanayi ve Tic. Ltd. Şti. accepts no liability for any damage resulting from use that does not comply with the instructions in this user manual.

Warning Symbols Used in the Manual

WARNING! Indicates hazards that could result in injury or death.

CAUTION! Indicates hazards that could result in damage to or malfunction of your appliance.

NOTE: Highlights important and useful information throughout the manual.

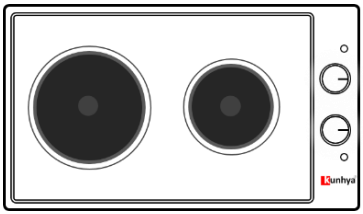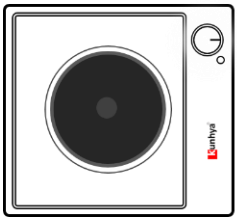			
Electric Countertop Stove	EN 60335-1:2012 EN 60335-2-6:2015	**Electric Countertop Stove**	EN 60335-1:2012 EN 60335-2-6:2015
Brand	Kunhya	**Brand**	Kunhya
Specification	1002-1 / 1002-2	**Specification**	1001-1 / 1001-2
Voltage	220 VAC	**Voltage**	220 VAC
Frequency	50 Hz	**Frequency**	50 Hz
Power	2500 w	**Power**	1500 w
Certificate	LVD – 1356	**Certificate**	LVD – 1356
Protection Class	Class I	**Protection Class**	Class I

SAFETY INSTRUCTIONS

Intended Use

This appliance is designed exclusively for domestic (household) use. It is not suitable for commercial or industrial applications. Any use contrary to this will void the warranty service provided by our authorized technical services.

Unauthorized Use

Under the following conditions of unauthorized use, the appliance may be damaged or cause injury:

1. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless supervised.
2. This appliance is not a toy. Do not allow children to operate or play with the device. Exercise extreme caution when using the appliance near children.

3. Keep packaging materials such as plastic bags and cardboard away from children. Packaging materials pose a choking and suffocation hazard.

Important Safety Rules

 For your safety and the safety of others, read the user manual before operating the product. Keep this manual for future reference. If you pass the appliance to another person, hand over this manual as well.

When using this product, basic safety precautions must always be followed:

1. The general safety precautions specified below must be strictly observed when using this product.
2. Read the operating instructions carefully before using the product.
3. Our product operates at 220-240 volts. Your voltage must be within these values. Since ideal power cannot be obtained at low voltage, the efficiency of the appliance decreases and the cooking time may be prolonged.
4. Never immerse the product in water.
5. Unplug the product from the socket if you observe any problem with it, while attaching accessories during cleaning, or when it is not in use.
6. Make sure that the power cord does not come into contact with the hot surface of your product.
7. Always connect your product to a grounded outlet. Our company will not be responsible for malfunctions and accidents that may occur if the product is used without grounding.
8. Be careful when the product is hot. Do not operate it in places accessible to children and pets.
9. Place your product on a hard, flat, and stable surface.
10. Fully unwind the cord when using the appliance.
11. Be sure to unplug the appliance after each use.
12. Do not place your product under wall-mounted kitchen cabinets, under shelves, or close to flammable materials such as blinds or curtains.

13. Unplug your product from the outlet before cleaning and positioning it, and always wait for it to cool down.

14. Make sure your product does not remain wet or damp. Do not use your product in bathrooms, wet areas near sinks, or excessively humid places

15. Do not operate your product directly on a carpet.

16. Ensure there is a 20 cm clearance on the sides while the product is operating.

17. The appliance has three separate levels. The controlled temperature levels are provided via the control knob..

18. While the appliance is operating at any heat level, you can switch to other heat levels using the temperature control knob. If these transitions are from low to high, the temperature control lamp will continue to stay lit; if they are from high to low, the temperature control lamp will turn off because the temperature setting thermostat will cut off the power supply until the temperature reaches the level of the selected heat setting.

19. While the appliance is operating at any heat level, the temperature control lamp turns on. When the temperature of the cooking plate reaches or exceeds the set temperature level, the temperature setting thermostat activates and cuts off the heater supply. In this case, the temperature control lamp turns off. When the temperature of the cooking plate drops below the set temperature level, the temperature setting thermostat reactivates, turns on the heater supply, and the temperature control lamp turns on.

⚠ WARNING! The upper part (cooking plate) of the electric stove is coated with a heat-resistant protective substance, and a small amount of odor and smoke may occur during the first operation. This situation will resolve itself within a few minutes.

Rules to be followed in Maintenance, Repair and Use.

a. Clean the product with a damp cloth before first use.

b. Do not immerse the product in water for any reason whatsoever.

c. Make sure that the bottom of pots, kettles, etc. that you will use on your electric stove is flat and is neither larger nor smaller than the diameter of the cooking plate.

Things to consider during handling and transportation.

a. The device must be transported in its original box.
b. Do not step on the box.
c. The warnings and caution signs on the box must be strictly followed.

Warnings regarding situations that may be harmful to human or environmental health during use.

a. Do not touch the heating plate with bare hands while it is operating.
b. Always use it with a grounded socket.
c. Keep children and disabled individuals away while using.
d. Use the product by placing it on a flat, stable, and heat-resistant surface.
e. Do not use the product with an extension cord or a multi-socket group.
f. Do not attempt to work on/with the product while it is in operation.

Information regarding usage errors.

1. This product is designed for household use to cook or heat food. Do not use it for commercial purposes
2. Do not immerse the product in water for any reason whatsoever. .
3. Keep your product clean and prevent food waste from sticking to it.
4. Make sure that the plug is definitely not connected when cleaning.
5. The device must not be operated continuously without a cookware on it.
6. It must not be used for purposes other than cooking (continuous use, heating, etc.).
7. Make sure that the bottoms of pots, kettles, etc. that you will use on the cooking plate are not wet.

Maintenance, repairs, or cleaning to be performed by the consumer.

1. Before starting to clean the device, check whether the plug is connected and whether the cooking plate is cold.
2. The body of the device should be cleaned with a sponge or a soft cloth using cream cleaners. Wire brushes must never be used.

3. The cooking plate should be cleaned at least once a month depending on the frequency of use.
4. The cooking plate must never be cleaned with water; it should be wiped with a damp cloth. Otherwise, it will cause electrical malfunctions and rusting of the cooking plate
5. Do not use hard, abrasive materials that will damage the non-stick surface and external paint when cleaning the product.
6. Do not use thinner, gasoline, or chemical cleaners..
7. Never use abrasive dishwashing products.

 **WARNING!** Do not allow the electrical components and power cord of your product to come into contact with water.

Our products do not require any additional setup and operate simply by plugging the power cord into the outlet.

Efficient use of the product in terms of energy consumption.

a. Do not use the product for purposes other than its intended use.
b. Since the product is equipped with a thermostat, adjust the temperature level according to your intended use (heating, cooking).
c. Always unplug the product from the outlet after use.
d. Operate it at the voltage matching its technical specifications. Do not attempt to open it.

RECYCLE:

 In accordance with the laws in your country, please dispose of this device in designated collection bins for such equipment. Electrical waste should not be discarded along with regular household trash; please place the device in bins specifically intended for electrical waste. The device's packaging materials are made from recyclable substances; please dispose of them in recycling bins.

DISPATCH: The device must be transported in its original packaging or in suitable, soft protective packaging to prevent it from being damaged.

WARRANTY CERTIFICATE

Manufacturer or Importer Company:	**Seller:**
Company Name: Kunhya Day.Tük.Mal.San. ve Tic.Ltd.Şti. **Address:** Melikgazi / Kayseri **Phone**: +90549 797 4949 **E-mail:** info@kunhya.com.tr **Signature of Authorized Representative:** **Company Stamp:**	**Company Name:** **Address:** **Phone:** **E-mail:** **Invoice Date and Number:** **Date and Place of Delivery:** **Authorized Signatory's Signature:** **Company Stamp:**

Of the goods	
Type: Electric Stove **Brand:** Kunhya **Model:** 1001-1/1001-2 1002-1/1002-2	**Warranty Period:** **Maximum Repair Period:** **Label and Serial Number:**

WARRANTY TERMS

1) The warranty period begins on the date of delivery of the product and is 2 years.
2) The entire product, including all its parts, is covered under the warranty.
3) In the event that the product is found to be defective, the consumer may exercise any of the following rights, as set forth in Article 11 of the Law No. 6502 on the Protection of the Consumer:
a- To rescind the contract,
b- To request a reduction in the sale price,
c- To request free-of-charge repair,
ç- To request the replacement of the product with a non-defective equivalent.
4) If the consumer chooses the right to a free-of-charge repair, the seller is obligated to perform—or have performed—the repair of the product without charging any fees for labor, the cost of replaced parts, or any other expenses. The consumer may also exercise this right to a free-of-charge repair against the manufacturer or the importer. The seller, the manufacturer, and the importer are jointly and severally liable for the consumer's exercise of this right.
5) In the event that a product—for which the consumer has requested free repair—encounters any of the following situations, the consumer may demand a refund of the purchase price, a price reduction proportional to the defect, or, if possible, the replacement of the product with a non-defective equivalent:
- The product malfunctions again within the warranty period;
- The maximum time allowed for repairs is exceeded;
- It is determined via a report issued by an authorized service center, the seller, the manufacturer, or the importer that the product cannot be repaired.
The seller cannot refuse the consumer's request. If this request is not fulfilled, the seller, the manufacturer, and the importer shall be held jointly and severally liable.
6) The repair period for a product shall not exceed 20 business days; for passenger cars, light trucks, motorcycles, ATVs, motorized bicycles, motorized scooters, personal watercraft, yachts, snowmobiles, and caravans, this period shall not exceed 45 business days. This duration begins from the date the malfunction is reported to an authorized service center or the seller (if within the warranty period) or from the date the product is delivered to an authorized service center (if outside the warranty period). If the malfunction cannot be resolved within 10 business days, the manufacturer or importer must provide another product with similar specifications for the consumer's use until the original product is repaired. If a product malfunctions during the warranty period, the time spent on repairs shall be added to the total warranty period.
7) Malfunctions resulting from use that is contrary to the instructions provided in the product's user manual are excluded from the warranty coverage. 8) In the event of any dispute arising from the exercise of rights granted under the warranty, the consumer may apply to the Consumer Arbitration Committee or the Consumer Court located in the place where the consumer resides or where the product was consumed (purchased/used).
9) In the event that the seller fails to provide this Warranty Certificate, the consumer may apply to the Ministry of Trade, General Directorate of Consumer Protection and Market Surveillance.